FITTING INSTRUCTIONS

0800 607 028 sales@windsorhardware.co.nz windsorhardware.co.nz

KEPLER & TASMAN PULL HANDLES

Product codes: 8336 | 8337 | 8341 | 8342

BACK TO BACK FIXING



 Mark the fixing position on the door. Ensure adequate space is provided for clearance of the knuckles on the door jamb.



 
Mount the outside handle by bolting through the door. Include the mounting base for the inside handle.

Note: Only use neoprene sleeves and washers for glass doors.



2. Drill the holes for the through bolts.

Note: For glass doors, allow for neoprene sleeves.



Fix the inside handle over the cylindrical mount and fasten with the grubscrews provided.

SINGLE HANDLE REAR FIX



 Mark the fixing position on the door. Ensure adequate space is provided for clearance of the knuckles on the door jamb.



3. Mount the handle by bolting through the door.



2. Drill the holes for the through bolts.

SINGLE HANDLE FACE FIX

Note: Face fixing is not recommended on Cedar or other soft timber doors.



 Mark the fixing position on the door. Ensure adequate space is provided for clearance of the knuckles on the door jamb.



3. Fix the handle over the cylindrical mount and fasten with the grubscrews provided.



Screw the mounting bases to the face of the door using the large screws provided.