



### T-PULL HANDLE - BLK, GN

Product codes:	7025	7026	7027	7028	7054	7055	7063	7064	7065	7066	7092
	7093	7094	7095	7096	7097	7119	7120	7121	7122	7123	7124
	7125	7126	7127	7159	7160	7161	7162	7163	7164		


#### BACK TO BACK FIXING

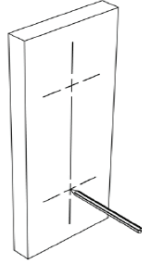


**1.** Mark fixing position on door. Ensure adequate space is provided for clearance of knuckles on door jamb.

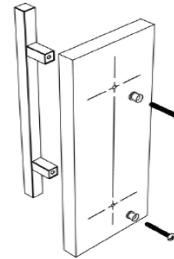

**3.** Mount outside handle by bolting through door. Include the mounting base for inside handle.  
*Note: Only use neoprene sleeves and washers for glass doors.*




**2.** Drill holes for through bolts.  
*Note: For glass doors, allow for neoprene sleeves.*

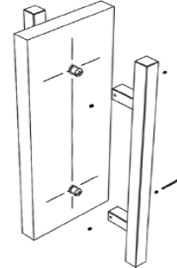


**4.** Fix inside handle over cylindrical mount and fasten with grub screws.


#### SINGLE HANDLE REAR FIX

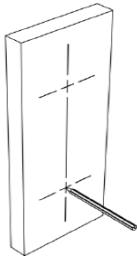

**1.** Mark fixing position on door. Ensure adequate space is provided for clearance of knuckles on door jamb.

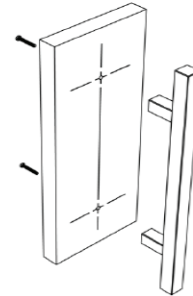


**3.** Mount handle by bolting through door.




**2.** Drill holes for through bolts.


#### SINGLE HANDLE FACE FIX

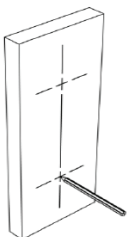

**1.** Mark fixing position on door. Ensure adequate space is provided for clearance of knuckles on door jamb.

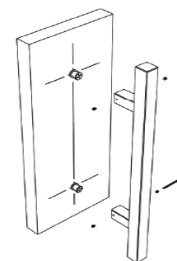

**3.** Fix handle over cylindrical mount and fasten with grub screws.

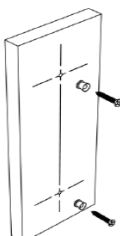

**2.** Screw mounting bases to face of door using large screws supplied.

*Note: Face fixing is not recommended on Cedar or other soft timber doors.*