



D-PULL HANDLE - BLK, GN

Product codes: 7098 | 7099 | 7100 | 7101 | 7102 | 7128 | 7129 | 7130
7131 | 7182 | 7183 | 7187 | 7188 | 7189 | 7190 | 7238 | 7239 | 7240 | 7241


BACK TO BACK FIXING

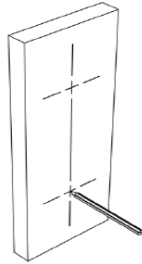


1. Mark fixing position on door. Ensure adequate space is provided for clearance of knuckles on door jamb.

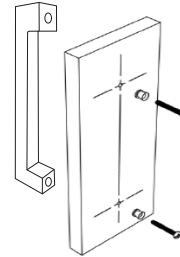

3. Mount outside handle by bolting through door. Include the mounting base for inside handle.
Note: Only use neoprene sleeves and washers for glass doors.




2. Drill holes for through bolts.
Note: For glass doors, allow for neoprene sleeves.

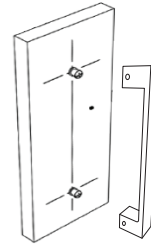


4. Fix inside handle over cylindrical mount and fasten with grub screws.


SINGLE HANDLE REAR FIX

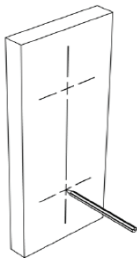

1. Mark fixing position on door. Ensure adequate space is provided for clearance of knuckles on door jamb.

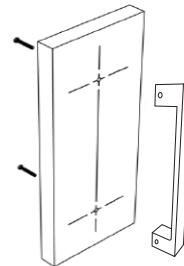


3. Mount handle by bolting through door.




2. Drill holes for through bolts.


SINGLE HANDLE FACE FIX

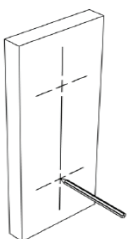

1. Mark fixing position on door. Ensure adequate space is provided for clearance of knuckles on door jamb.

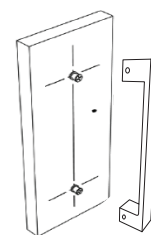

3. Fix handle over cylindrical mount and fasten with grub screws.

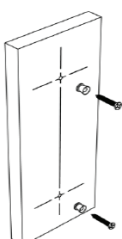

2. Screw mounting bases to face of door using large screws supplied.

Note: Face fixing is not recommended on Cedar or other soft timber doors.